


608 External Sensor Calibration Instruction

We recommend to calibrate the external sensor

Make sure the external sensor is connected to the system and submerged in liquid Nitrogen (-196°C temperature)

Now in the monitoring software click [service settings]

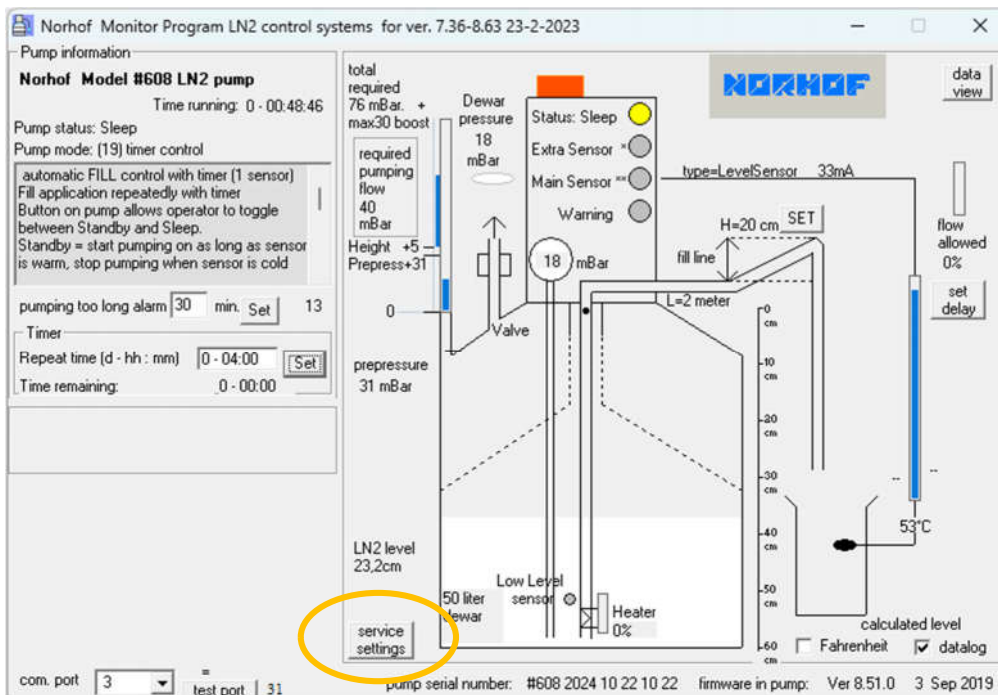

In service settings select the tab <calibration> click on the [calibrate -196] button

