


Pressure sensor Calibration Instruction

Make sure that the Norhof pump is out of the Dewar in ambient pressure.

Now in the monitoring software click [service settings]

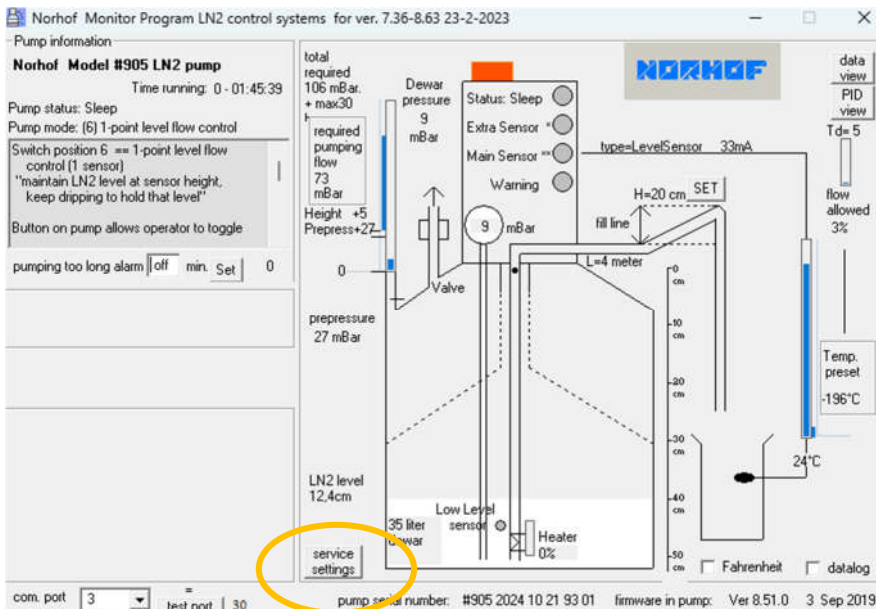

In service settings select the tab <calibration> click on the [calibrate 0 mBar] button

The screenshot shows the 'service settings' window, specifically the 'calibration' tab. The 'calibration' tab is highlighted with a yellow circle. The 'calibrate 0 mBar' button is also highlighted with a yellow circle. The window contains various calibration settings and instructions for the main and extra sensors.